 





## Temperature Switch Installation Instructions

- 1.) Find a location where temperature can be measured such as the existing sending unit, temperature switch, or pipe fitting normally located on the front of the intake manifold.
- 2.) Replace the old switch or pipe plug with the new switch.  
**Important:** Many Emission Control Devices are connected to temperature senders or switches so be careful not to disable these when installing a temperature switch.
- 3.) Use 18 AWG wire (not included) to connect the switch unit to the light. All temperature switches must have the bulb end completely submersed (5/8" typical) to insure an accurate reading (1 Amp max.) Tighten units to 20Nm/15lb-in max or slightly more, if leakage occurs. Tighten 10-32 hex nut 1Nm/9lb-in max.

**Standard Terminal Stud**  
**Figure 1**

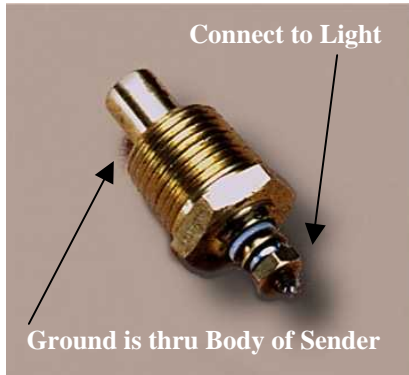

 **Isolated Ground (-03)**  
**Figure 2**

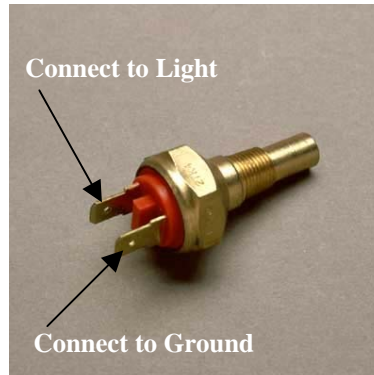


Form No. IS031 (Rev. A 8/14/02) Page 1 of 1




## Temperature Switch Installation Instructions

 - 1.) Find a location where temperature can be measured such as the existing sending unit, temperature switch, or pipe fitting normally located on the front of the intake manifold.
- 2.) Replace the old switch or pipe plug with the new switch.  
**Important:** Many Emission Control Devices are connected to temperature senders or switches so be careful not to disable these when installing a temperature switch.
- 3.) Use 18 AWG wire (not included) to connect the switch unit to the light. All temperature switches must have the bulb end completely submersed (5/8" typical) to insure an accurate reading (1 Amp max.) Tighten units to 20Nm/15lb-in max or slightly more, if leakage occurs. Tighten 10-32 hex nut 1Nm/9lb-in max.

**Standard Terminal Stud**  
**Figure 1**

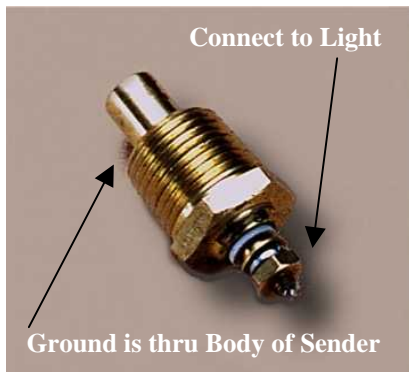

 **Isolated Ground (-03)**  
**Figure 2**

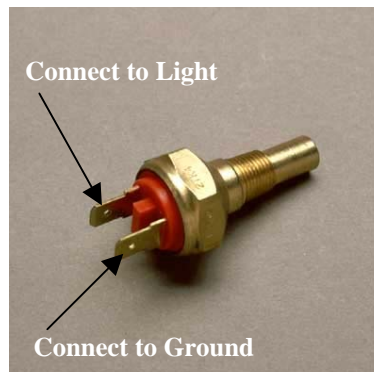

Form No. IS031 (Rev. A 8/14/02) Page 1 of 1