





### Pressure Switch Installation Instructions


**Standard Terminal Stud  
Figure 1**

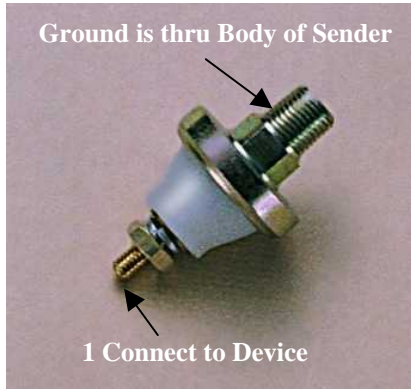

**2 Terminal Blades  
(Isolated Ground)  
Figure 2**

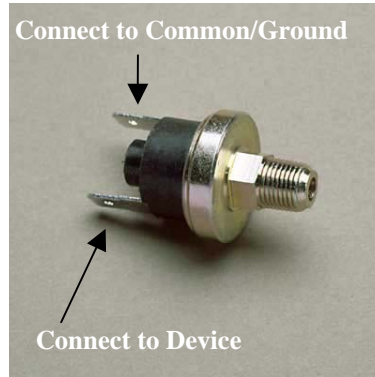

**(Changeover Units)  
Figure 3**

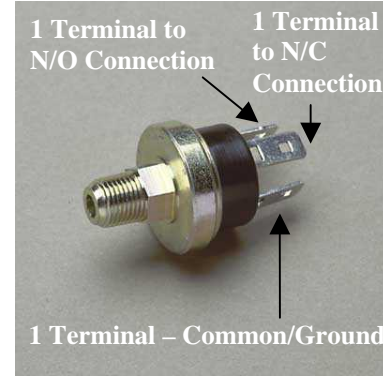


Use 18 AWG wire to connect switch to device used in your applications. Tighten 10-32 Hex Nut 1Nm/8.9lb-in max. Tighten 1/8 NPTF 6.8-11Nm/5-8lb-ft; use Hex Nut body to tighten unit. Consult ISSPRO catalog or ISSPRO technical help for explanation of options of contact types and pressure settings. Contacts close (N/O) or open (N/C) on specified pressure rating.




### Pressure Switch Installation Instructions


**Standard Terminal Stud  
Figure 1**

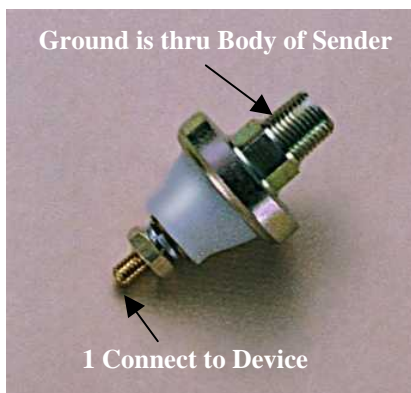

**2 Terminal Blades  
(Isolated Ground)  
Figure 2**

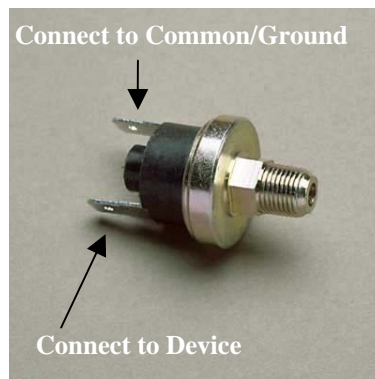

**(Changeover Units)  
Figure 3**

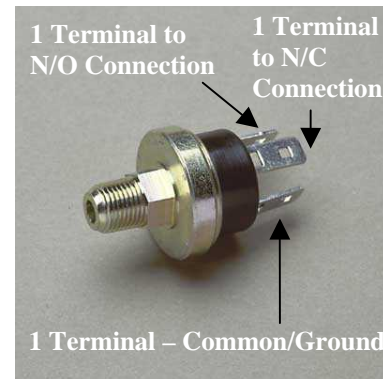

Use 18 AWG wire to connect switch to device used in your applications. Tighten 10-32 Hex Nut 1Nm/8.9lb-in max. Tighten 1/8 NPTF 6.8-11Nm/5-8lb-ft; use Hex Nut body to tighten unit. Consult ISSPRO catalog or ISSPRO technical help for explanation of options of contact types and pressure settings. Contacts close (N/O) or open (N/C) on specified pressure rating.