








# PERFORMAX



## VOLTMETER GAUGE INSTALLATION INSTRUCTIONS

**Models: R43600 R52600 R53600 R59600 R68600 R69600 R82600**

-  Disconnect batteries. Do not reconnect battery power until system is fully configured to avoid risk of shock or fire.
-  Install Electronic Signal Processor (ESP) and ESP harness according to instructions.
-  Connect voltmeter to the ESP. (See ESP instructions for more details on how to do this). Note: If drilling a mounting hole in a panel to mount this gauge, the hole size should be 2.040".
-  Secure all wiring so that it does not interfere with moving parts or chafe on sharp edges. This may be accomplished by routing the wiring within the factory wire harness sheath, using wire ties and sheathing, and using appropriate grommets when passing through the firewall.
- No external sensor is required. Sensor is internal to the ESP.

ICON KEY	
	CAUTION
	Tools may be required
	Shown in picture

**Form No. IS151 (Rev. A 03/11/2008)**